

Increasing TRH fan current

Out of desperation (T.15m was turning off its fan), I just figured out SRS's code:

control-U to get into user mode

"CUR xx" to set the current limit to xx

"EXT" to get back to data reporting mode.

Obviously, this only works on serial TRH's.