

pressure1 down, got usbdisk running on upwind

pressure1 died. No lights on the PC104 stack. It appeared that the fuse was blown on the aux2 power port of downwind1. Replaced it with a 1.5 A. Next day determined that the fuse was OK. This system seems to have a power problem.

Also replaced the aux1 fuse on the downwind1 box. Had to break it to remove it - it was frozen in its bed. aux1 port still doesn't work.

upwind's usbdisk was not mounting. Replaced it. Last data on pocketec was Jan 29 16:41 UTC. Restarted at Jun 30 01:42 UTC