

## TRH at 5 gone but not gone

10:00 I just notice the TRH at 5 is not showing on cockpit; however, talking directly to the DSM shows the sensor is coming in. The fan current is low so it maybe a test in cockpit that set TRH to RIP due to the low current. Since this fan current has been acting funny we will plan to replace the TRH housing.