## S<sub>3</sub> Pi

At the moment, this is up. With hints from syslog during a crash, and then Googling, I've done:

/boot/cmdline.txt - added "dwc\_otg.fiq\_fix\_enable=0", though this may not have been needed (update: yes, it is...)

/etc/default/avahi-daemon – set detect parameter to 0 to turn off avahi .local checking (couldn't find where unicast .local is being defined, so just turned the check off)