

Changing rsw repeater

Notes to myself...

☒ Change the ridge repeater from tse04 to rsw06 (because tse04's construction is delayed): Steve Oncley

- pull power "Y" cable from tse04t box.
- swap tse04t's 20W DC-DC converter with a 10W DC-DC conver
- climb to install "Y" cable and swap in 20W DC-DC converter on rsw06
- add access point Ubiquiti to rsw06